



**ABCSCOPE**

## User Manual of Laser Range Finder (LRF)

[www.abcscope.com](http://www.abcscope.com)



---

**ABCSCOPE**

The sight is connected to the LRF via Bluetooth to obtain distance data, so please ensure that Bluetooth is on when using the LRF.



### The use method is as follows

1. Please use the CR123 battery with sufficient power.
  2. Press and hold the key for 3 seconds to open the LRF. At this time, the indicator light is flashing. The flashing indicator light indicates that the Bluetooth is not connected.
-



3. Open the setting menu of the sight, select the Bluetooth option in the setting menu and open it. At this time, the countdown count is displayed on the display screen. Before the countdown ends, Bluetooth will display pairing success. The indicator light is always on, indicating that the connection is successful, if the indicator light flashes, indicating that the connection fails.
  4. Once the pairing is successful, the next time you use the LRF, you don't need to pair again. Just press and hold the key to open the LRF, the sight will automatically link with the LRF.
  5. Short press the power button of the sight to open the ranging function, and the actual distance will be displayed in the lower left corner of the display screen.
-



## The fixing method of the LRF is as follows

1. Find a dark and open environment, such as outdoors at night
  2. Loosen the screws of the LRF, and then put the LRF on the front end of the sight.
  3. Ensure that the sight and LRF are in normal working condition, and the distance display can be seen at the lower left corner of the display screen of the sight, at this time, the LRF is continuously emitting laser pulses, **don't look directly at the transmitter port of the range finder.**
  4. Turn on the night mode of the sight.
  5. Adjust the LRF so that the laser pulses of the LRF coincides with the center of the cross line on the sight screen.
  6. Tighten the screws of the LRF.
-